

# AIRPORT DIAGRAM

FARGO/HECTOR INTL (FAR)  
FARGO, NORTH DAKOTA

AL-144 (FAA)

ATIS 124.5 379.2  
FARGO TOWER  
133.8 290.4  
GND CON  
121.9 348.6  
CLNC DEL  
121.9 348.6

46° 56' N

ELEV 900  
81

AIR CARGO

ILS HOLD  
ARM/DISARM PAD  
FBO FACILITIES

NORTH GENERAL AVIATION RAMP

ELEV 896  
6

086.2°

6300 X 100  
← 266.2°  
ELEV 897


NC-1, 13 MAR 2008 to 10 APR 2008

TERMINAL RAMP

RWY 9-27  
S60, D100  
RWY 13-31  
S26, D35  
RWY 18-36  
S100, D200, ST175, DT400, SBTT400, AUW847

AIR CARRIER TERMINAL BUILDING  
CONTROL TOWER 1006

 46° 55' N



JANUARY 2005 ANNUAL RATE OF CHANGE 0.1° W

FIELD ELEV 902

33.1°  
3800 X 150  
356.2°  
36

ARM/DISARM PAD

CRASH FIRE RESCUE

NORTH DAKOTA AIR NATIONAL GUARD RAMP

ELEV 895

ANG MAIN HANGARS

ANG OPERATIONS

MIL  
US CUSTOMS

FBO HANGARS

HANGAR

SOUTH GENERAL AVIATION RAMP

ELEV 899

ELEV 899

96° 49' W

96° 48' W

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

NC-1, 13 MAR 2008 to 10 APR 2008

# AIRPORT DIAGRAM

FARGO, NORTH DAKOTA  
FARGO/HECTOR INTL (FAR)